

**TOOLS NEEDED FOR INSTALLATION**

- Heat gun
- Small wire or fishing line
- small plastic pry tool
- 1/2" drill bit and drill (if reapplying Chevy Bow Tie Emblem over panel)

2010 CAMARO TAIL PANEL BLACKOUT SET

1. Use heat gun and small wire or fishing line to remove Camaro Bow tie from back of vehicle: Heat up emblem to soften glue on double sided tape securing it to the car. Slide wire or fishing line between emblem and trunk panel. Use a sawing motion to work the line thru the emblem.

Note: Some cars have two pegs used to line up the emblem for fitment from the factory, these are not shown on the pictures here but it's believed that cars manufactured in early 2010 had these pegs.

When using the wire take note that you may or may not have to work around the pegs depending if your car has them. A small plastic or non abrasive pry tool may also be used to help remove the emblem during this process as well. Take care to not damage paint.

Figures 1 & 2

2. Remove excess tape & glue from trunk lid.

Figure 3



3. If reinstalling Chevy bow tie emblem over tail panel blackout set , remove excess tape & glue from the back of it as well. *(Refer to end of installation instructions for pictures of kit installed with and without emblem to help decide if you want to reinstall emblem or not)*

Figure 4

4. **If your car does NOT have indexing pegs on the Chevy Bow Tie Emblem skip to next step -OR- If you do NOT want to reapply the Chevy Bow Tie Emblem skip to the next step.**

**OPTIONAL:** If you want to reapply the Chevy Bow Tie Emblem and it has indexing pegs follow these instructions: Turn the large center portion of the Drake Blackout Panel over to the side with the tape applied. Near the middle of it there are two small dimples. You will need to drill a 1/2" hole located at each of these centering marks for installation.

Figure 5

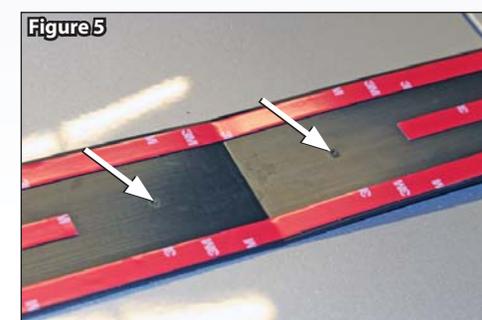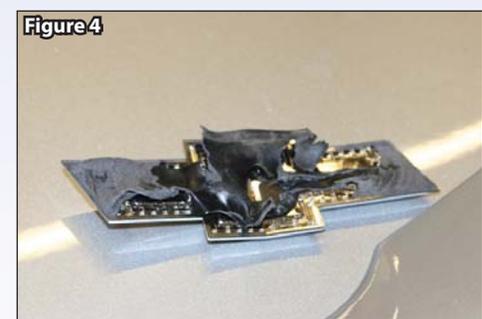

## 2010+ CAMARO TAIL PANEL BLACKOUT SET

INSTALLATION INSTRUCTIONS (FOR PART # CA-190004-BLK)

Page 2 of 2

5. Remove double sided tape from large center panel and apply to trunk lid making sure it's centered and lined up as wanted. The tape sticks VERY strong, so take your time to get this lined up right the first time. Possibly check alignment of the center piece a few times before removing tape protection to make sure it will be positioned where you want it.

6. Peel tape from double sided tape and apply pieces for between tail lights and on outer edge of tail lights.

Figure 6

7. **OPTIONAL:** If reapplying the Chevy Bow Tie Emblem, use die cut tape supplied with kit to apply emblem to vehicle. Make sure to position level and centered.

Figure 7

Enjoy the new look of your Camaro tail panel, and be sure to visit [www.DrakeMuscleCars.com](http://www.DrakeMuscleCars.com) for more great Camaro parts and accessories!

