



350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632  
[www.ridetech.com](http://www.ridetech.com)


**Part # 11379100**

**88-98 C-1500 Front MuscleBar**

**Components:**

- 1 90001762 Sway bar
- 1 90001763 Hardware Kit (Includes the following)
  - 1 End Link Set
  - 8 End link bushing
  - 2 End link spacer
  - 2 End link bolts
  - 2 End link nuts
  - 8 Washer
  - 2 1 7/16" Frame bushing
  - 2 Frame bracket
  - 1 Grease pack

## FRONT SWAY BAR REMOVAL

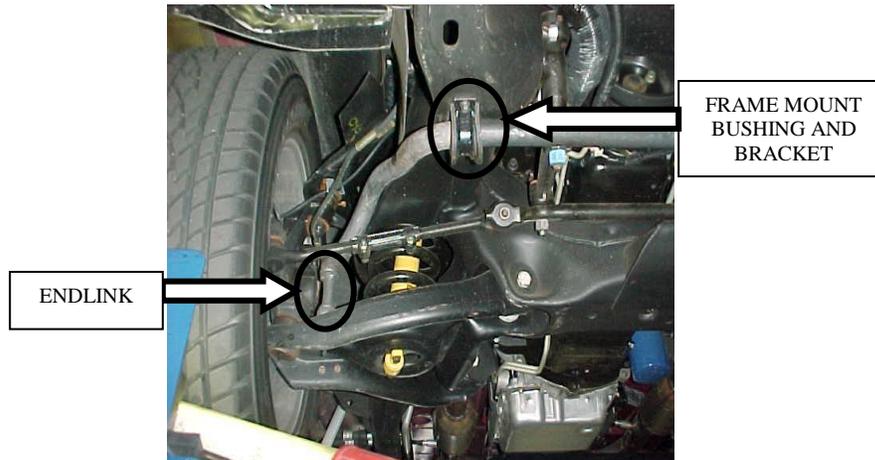

1. Remove end links from each side of the vehicle.
2. Support the stock sway bar and remove the brackets that attach the bar to the frame.
3. Remove the bar.
4. Spread a light coat of supplied grease onto the frame mount bushings I.D. and install on the bar with the slit side of the bushing facing to the front. Install the brackets over the bushings.
5. Attach the front sway bar brackets and bar. Torque to 20ft. lbs.

Install the supplied end links. Torque to 13ft. lbs.