



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com

Part # 19011499
Mustang II Lower StrongArms
For Use with CoolRide

Components:

1	90000651	Driver side lower arm
1	90000652	Passenger side lower arm
2	90000895	Ball joint – includes castle nut, cotter pin, grease fitting & boot
4	90001942	Rubber bushings – pressed into arms
2	90000202	Gusset for cross member
2	90000277	7.75" steel spacer
2		Steel spacer for ball joint – may not be needed on some cars


Hardware:

2	99621008	5/8"-18 x 12" bolt
2	99622006	5/8"-18 Nylok jam nut
4	99563001	9/16" USS flat washer

Installation Instructions


ARM 1000 INSTALLATION INSTRUCTIONS

EXAMPLE A

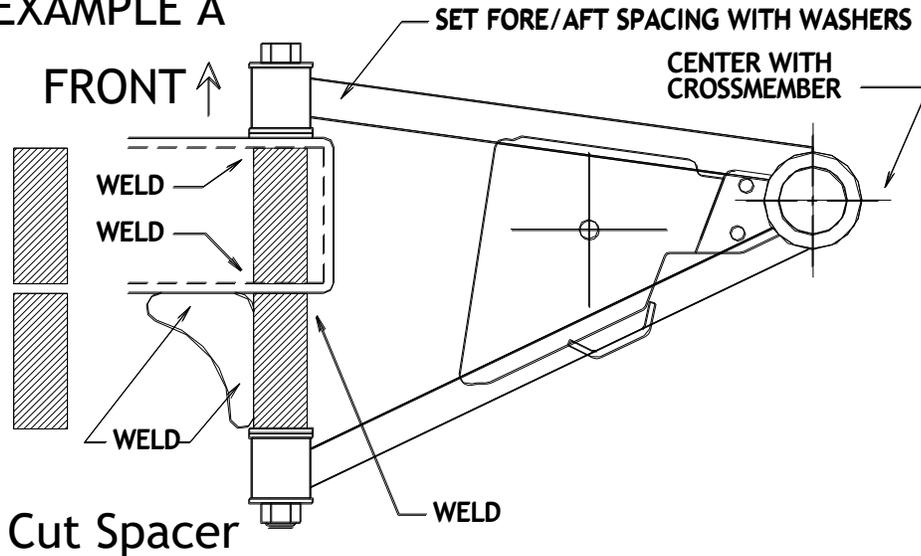

OR

EXAMPLE B

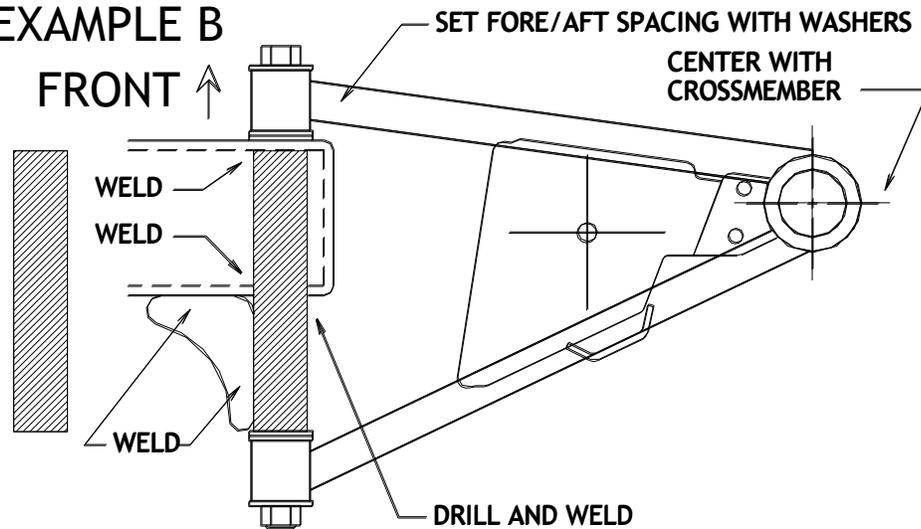

Spacer Placed Thru
1.375" hole drilled in rear
side of crossmember

STRONG ARMS™

by Air Ride Technologies

Item #	Description	Qty.
1.	Driver side arm	1
2.	Ball joint	1
3.	Rubber bushing	2
4.	Frame gusset	1
5.	Frame spacer	1
6.	5/8"-18 x 12" bolt	1
7.	5/8"-18 Nylok jam nut	1
8.	9/16" USS flat washer	2

